

## 25. Inlet and exhaust system

<b>Heating element, crankcase ventilation</b>	<b>B18F/FT/K</b>
Resistance at 20°C ..... Ohms	10-19

### Turbo B18FT/FTM

Type .....	Garett T2	
Diaphragm valve, boost pressure control .....	small 56	large 75
Boost pressure at maximum load .....	kPa	

### Boost pressure regulating valve

	<b>B18FT, B18FTM</b>	
Operating voltage .....	Volt	8-16
Resistance of magnetic coil at 20°C ... Ohms		29±3
Regulation frequency .....	Hz	128
Diaphragm valve, boost pressure control .....		small
Basic pressure:		large
Value when checking .....	kPa(Bar)	26-30 (0.26-0.30)
Value when adjusting .....	kPa(Bar)	28±1 (0.28±0.01)
		16.5-18.5(0.165-0.185)
		17.5±1(0.175±0.01)

### Tightening torques

	<b>Nm</b>
Studs, manifold .....	12
Attachment nuts, turbocharger unit .....	35
Studs, turbocharger unit .....	21
Oil pipe, turbocharger, below union .....	35
Oil pipe, turbocharger, below flange .....	21
Oil pipe, turbocharger, upper .....	22
Exhaust to manifold turbo .....	40
Banjo bolts, turbocharger cooling .....	40

## EGR control system - D19T

### **Thermopneumatic valve (in coolant hose)**

Opens at ..... °C >20

### **Electrical EGR valve**

Resistance ..... ohms 30

### **Altitude sensing switch**

Opens at an air pressure of ..... Mbar >875 (1,500 metres)

## Turbocharger unit, D19T

Type ..... Garrett T2

Boost pressure  
at 2,500 r/min (full load) ..... kPa (Bar) 70-85 (0.7-0.85)

### **Tightening torques**

	Nm
Flexible attachment,	
exhaust downpipe to turbocharger unit .....	30
Bolts, exhaust downpipe to turbocharger .....	45
Bolts, turbine housing .....	22
Curved exhaust pipe on turbine housing .....	90
Nuts, turbocharger unit to manifold .....	35
Diaphragm valve .....	15
Lock nut, actuating rod to diaphragm valve ..	7
Coolant pipes, turbocharger unit .....	25
Inlet oil pipe, turbocharger unit .....	20
Outlet oil pipe, turbocharger unit .....	40

## Tightening torques

Nm

Exhaust to manifold .....	25
Exhaust clamps .....	24
Exhaust clips, wide .....	50
Bolts, catalytic converter to front pipe with spring .....	20
Bolts, catalytic converter to front pipe without spring .....	40
Plug in catalytic converter .....	25
Inlet and exhaust manifolds, nut .....	20
Studs, inlet and exhaust manifold .....	10
Inlet manifold .....	10
Throttle linkage on manifold .....	7
Throttle valve housing to inlet manifold .....	17
Exhaust to manifold, EP/FP .....	25
Bolt, manifold support .....	20
Bolts, fuel distribution manifold .....	20
Bracket, air filter housing .....	9

### B18K/KP only:

Air filter, studs .....	8
Air filter, nuts .....	5
Exhaust studs in manifold .....	20
Inlet and exhaust manifolds, nuts .....	17.5
Downpipe connection, bolt .....	17.5

### B18U only:

Exhaust to manifold, nuts .....	10
Exhaust to manifold, studs .....	15
Exhaust clips .....	20
Catalytic converter, bolts .....	20
Throttle valve to SPI unit on rubber base .....	9
Rubber base to inlet manifold .....	15
Manifold studs .....	17

### B20F only:

Retaining nuts, fuel distribution manifold .....	10
Pressure regulator on fuel distribution manifold .....	5
Throttle valve housing, nut .....	9
Exhaust to manifold .....	30
Bolts, catalytic converter .....	20
Heat shield .....	8