


**Control setting**

Blower fan speed .....	3
Temperature control .....	maximum cold
Function selector switch .....	vent
Air conditioning (A/C) switch .....	on
Recirculation switch .....	on

**Recorded operating conditions**

Ambient air temperature measured in front of car	20°C (68°F)	30°C (86°F)	40°C (104°F)
Temp. of expelled air measured at center panel vents.	5 - 8°C (41 - 46°F)	5 - 8°C (41 - 46°F)	8 - 12°C (46 - 54°F)

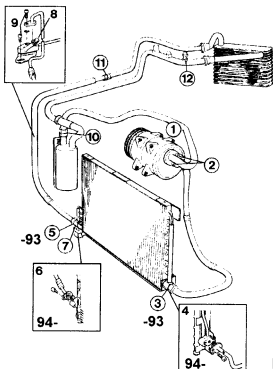

587026/08

	Nm
1. Screws, compressor brackets ..	40
2. Screws, compressor terminal ..	24
3.4. Terminal to condenser .....	20
5.6. Terminal from condenser ....	20
7. Terminal, high pressure switch (-1993) .....	10
8. Terminal, high pressure switch (1994-) .....	8
9. Connector (1994-) .....	20
10. Terminal from receiver/dryer ..	30
11. Expansion valve .....	30
12. Pressure switch (Pressostat), plastic mounting .....	3
steel mounting .....	8